H-VALVE






DIMENSIONS		
L1	68,5	
L2	50	
D	1/2"	
SW1	24	
SW2	29,5	
SW3	12	

TECHNICAL DATA SHEET	
Product Name	H-Valve
Working Temperature	Max. 120°C
Pressure Class	Max. 10 Bar
Intended Use	Plumbing Systems
Code	06.05.881
Standard	TS 579

MATERIALS		
Body	BRASS	
Tube	BRASS	
Nut	BRASS	
Nipple	BRASS	
Seal	PTFE(TEFLON)	

MATERIALS		
Ring	BRASS	
Ball	BRASS	
0-Rings	NBR	
Stem	BRASS	

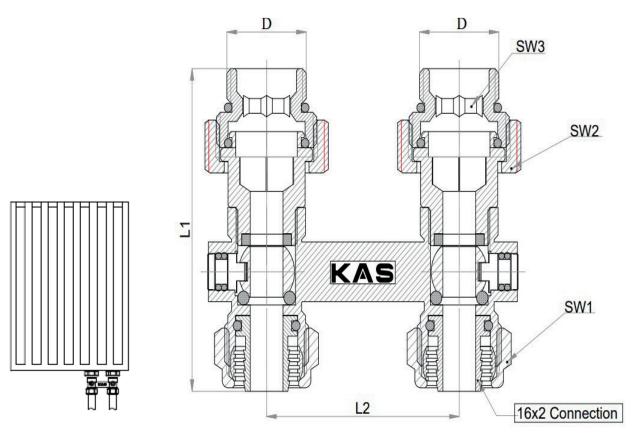





INSTALLATION and OPERATING INSTRUCTION

- **1-** Do not unpack the valve until installation to prevent falling of any unwanted substance that may affect the working of valve.
- 2- Take measures againts any possible damage thay may occur during transport and shipment.
- 3- Clean away every unwanted substance in your system before installation.
- **4-** Valve sholud be off position while intalling.
- **5-** Be careful that the thread length of the part that will be installed to the valve will not be too longer or too shorter than the thread length of the valve.
- 6- While installing, grab the valve by the appropriate tool from the across flats where you'll install it.
- 7- During installation do not use excessive adhesive or any unsuitable substance.
- **8-** Use the valve fully open or fully closed position.
- **9-** Do not paint the valve. Do not expose the valve with abbrasive chemicals.
- **10-** Do not use any other tools for opening or closing the valve and do not remove the handle.
- 11- In case of any damage or disorder, valve should be changed by authorities.
- **12-** Complying with the installation and usage instruction is compulsory. Otherwise, the product will be cut of guarantee.
- 13- Do not forget to get the document of guarantee. This document is valid only with the related bill.

