






TECHNICAL DATA SHEET	
Product Name	Manifold With Thermostatic Insert
Standard	TSE K
Max. Operating Temperature	90°C
Operating Pressure	6 Bar
Usage Area	Water Plumbing

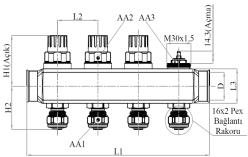

PRODUCT CODE-1832...

Dim.	902	903	904	905	906	907	908	909	910	911	912
D	1"	1"	1"	1"	1"	1"	1"	1"	1"	1"	1"
H1	59,7	59,7	59,7	59,7	59,7	59,7	59,7	59,7	59,7	59,7	59,7
& !	50,8	50,8	50,8	50,8	50,8	50,8	50,8	50,8	50,8	50,8	50,8
L1	126	176	226	276	326	376	426	476	526	576	626
L2	50	50	50	50	50	50	50	50	50	50	50
L3	40,5	40,5	40,5	40,5	40,5	40,5	40,5	40,5	40,5	40,5	40,5
AA1	24	24	24	24	24	24	24	24	24	24	24
AA2	30	30	30	30	30	30	30	30	30	30	30
AA3	19	19	19	19	19	19	19	19	19	19	19

MATERIAL PROPERTIES		
KOLLEKTÖR	Stainless	
Nipple	Brass	
16X2 Tip	Brass	
Ring	Brass	
Nut	Brass	
0-RİNG	NBR	
Cover	Plastic	
Packing	Brass	

SURFACE PROPERTIES (COATING)		
Nipple	Nickel	
16X2 Tip	Nickel	
Nut	Nickel	



Area of Use

Self-valved collectors enable the water coming from the feeder to be distributed to other lines in the system or collected from other lines in the hot/cold water installation systems.

TOO/RO2/170823/7-2-A-19-1

Assembly and Usage Instructions:

- 1- Be careful not to damage the product during transportation. Before assembly, do not remove it from the package until the
- moment of assembly to prevent foreign matter from entering the product that may affect its operation.
- 2- Clean any foreign matter in your installation before installation.
- 3- Make sure that the thread length to be connected to the collector is not too short or too long than the thread length on the collector.
- 4- First, mount the hose to the collector. Grasp the collector assembly from the wrench opening and assemble it with
- a suitable wrench that will not damage it.
- 5-Make sure that the hose to be connected to the collector is the correct size (16x2/17x2). The nut, ring and Attach the ends to the hose first. Then make the nut with the wrench suitable for the body.
- 6-During assembly, make sure that the connections are axial with the collector.
- 7-The installation must be protected against the danger of freezing.
- 8- It is suitable for use in heating systems, it should not be used in flammable or caustic gas installations.
- 9- Do not paint the product or contact it with corrosive chemicals.
- * If the product is defective or malfunctions, return it with the invoice and warranty certificate and replace it with a new one.

You can get it from our factory free of charge.

** Do not forget to get the Warranty Certificate and invoice from your dealer along with this product. The warranty certificate is

valid together with the invoice. Please read the warranty terms.