




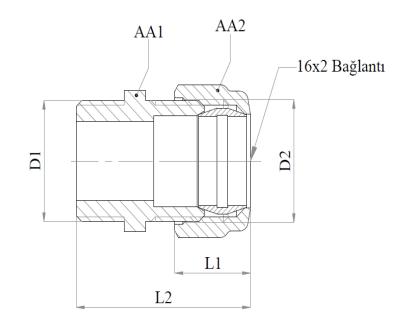

TECHNICAL DATA SHEET Product Name Under Floor Union for Pipe Connection Intended Use Installation Systems

| DIMENSIONS | | |
|------------|-----------|--|
| Code | 06.01.314 | |
| D1(thread) | 1/2" | |
| D2(thread) | 1/2" | |
| AA1 | 21 | |
| AA2 | 24 | |
| L1 | 14,2 | |
| L2 | 32,6 | |



| MATERIAL PROPERTIES | | |
|---------------------|-------------------------|--|
| BODY | BRASS (CW617N)/(CW614N) | |
| NUT | BRASS (CW617N)/(CW614N) | |
| RING | BRASS (CW617N)/(CW614N) | |

| SURFACE PROPERTIES | | |
|--------------------|--------|--|
| TIP | NICKEL | |
| NUT | NICKEL | |





INSTALLATION and OPERATING INSTRUCTION

- **1-** Do not unpack the valve until installation to prevent falling of any unwanted substance that may affect the working of valve.
- 2- Take measures againts any possible damage thay may occur during transport and shipment.
- 3- Clean away every unwanted substance in your system before installation.
- 4- Valve sholud be off position while intalling.
- **5-** Be careful that the thread length of the part that will be installed to the valve will not be too longer or too shorter than the thread length of the valve.
- 6- While installing, grab the valve by the appropriate tool from the across flats where you'll install it.
- 7- During installation do not use excessive adhesive or any unsuitable substance.
- 8- Use the valve fully open or fully closed position.
- 9- Do not paint the valve. Do not expose the valve with abbrasive chemicals.
- 10- Do not use any other tools for opening or closing the valve and do not remove the handle.
- 11- In case of any damage or disorder, valve should be changed by authorities.
- **12-** Complying with the installation and usage instruction is compulsory. Otherwise, the product will be cut of guarantee.
- 13- Do not forget to get the document of guarantee. This document is valid only with the related bill.