


1" S.Steel Manifold with Automatic Air Vent

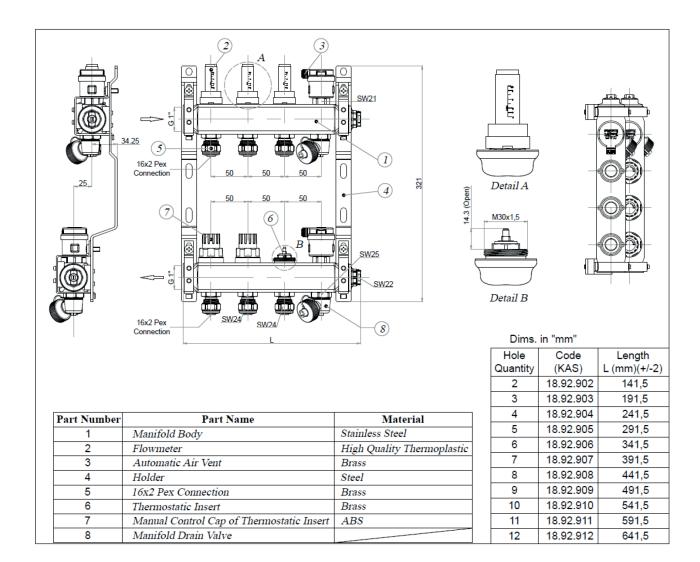

TECHNICAL DATA SHEET-18.92.902 to 912	
Product Name	1" S.Steel Manifold With Automatic Air Vent
Max Flow Temperature	90°C
Max Working Pressure	Manifold (T.Insert):10 bar/ Manifold (Flowmeter):6 Bar
Intended Use	Heating Systems



R00T00/050424/7-2-A-26-2

www. kas.com.tr



1" S.Steel Manifold with Automatic Air Vent



INSTALLATION and USAGE INSTRUCTION

1- Make sure there is no damage on the product may occur during transport and shipping. Before assembly do not unpackthe product in order to prevent from the external effects.

2- Clean all kinds of contaminants before assembly.

3- Make sure that the thread length to be connected to the manifold is not too short or too long than the thread length of the manifold.

4- Install the Manifold to the system by the appropriate tools.

- 5- First, install the Nut, Ring and Socket to the hose, then screw the nut to the manifold by the appropriate tools.
- 6- Make sure the hose to be connected to the manifold is the correct size.
- 7- Observe the axiality during assembly.

8- The installation system that manifold connected must be protected against the freezing.

9- Manifold is suitable for use in heating systems and should not be used in flammable or combustible gas/ liquid installations.

10- Do not paint the manifold, do not expose the manifold with abrasive chemicals, do not open or close with any other tool and do not remove the handle.

11- Complying with the installation and usage instruction is compulsory. Otherwise, the product will be out of guarantee.

12- Do not forget to get the documents of guarantee. This document is valid only with the related bill.