


# BRASS MANIFOLD SET WITH FLOW METER

# KAS®



## TECHNICAL DATA SHEET

<b>Product Name</b>	Brass Manifold Set With Flow Meter
<b>Standard</b>	TSE K 534 / TSEK
<b>Max. Operating Temperature</b>	120°C
<b>Pressure Class</b>	PN 10
<b>Intended Use</b>	Isıtma sistemleri

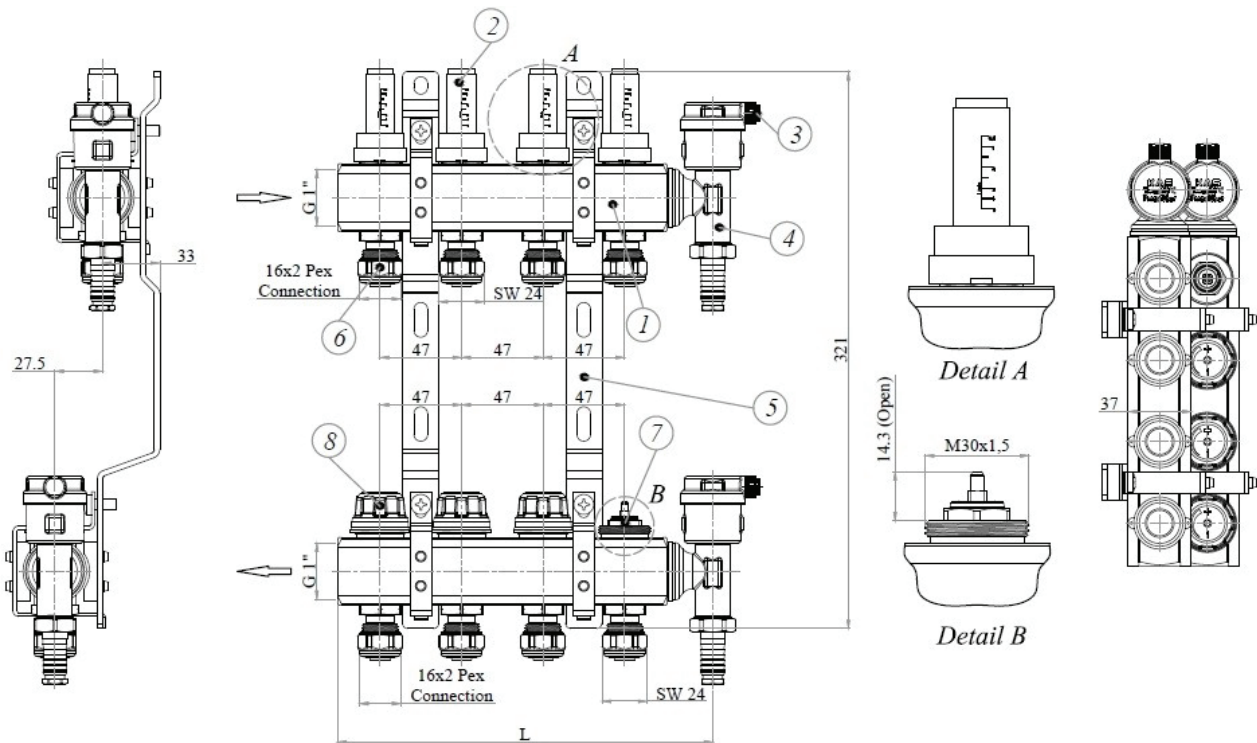

# BRASS MANIFOLD SET WITH FLOW METER

# KAS®

PART NUMBER	PART NAME	MATERIALS
1	Manifolt Body	Brass
2	Flow Meter	High Quality Thermoplastic
3	Automatic Air Vent	Brass
4	Drain Cock	Brass
5	Holder	Steel
6	16x2 Pex Connection	Brass
7	Thermostatik Insert	Brass
8	Manuel Control Cap of Thermostatic Insert	ABS

DIMENSIONS		
Hole Quantity	Code (KAS)	L (mm) (+/-2)
2	18.25.902	122,5
3	18.25.903	169,5
4	18.25.904	216,5
5	18.25.905	263,5
6	18.25.906	310,5
7	18.25.907	357,5
8	18.25.908	404,5
9	18.25.909	451,5
10	18.25.910	498,5
11	18.25.911	545,5
12	18.25.912	592,5

## INSTALLATION AND USAGE INSTRUCTIONS

- 1-** Be careful not to damage the product during transportation. Before assembly, do not remove it from the package until the moment of assembly to prevent foreign matter from entering the product that may affect its operation.
- 2-** Clean any foreign matter in your installation before installation.
- 3-** Make sure that the thread length to be connected to the collector is not longer than the thread length in the collector.
- 4-** Keep the collector in the closed position during installation. Turn the collector assembly to the switch on the collector body. Grasp it from the mouth using the appropriate wrench and assemble it.
- 5-** While mounting the collector to the installation, excessive use of medication or linen may affect the functionality of the product. be careful.
- 6-** When opening and closing the collector, follow the arrow signs on the flywheel.
- 7-** Do not paint the product or contact it with corrosive chemicals.
- 8-** Do not use any auxiliary tools during the collector opening-closing process.